



Hand Agitated Unit Information

Cleaning the Unit

- Fill the tank halfway to completely full of water. Agitate the system for 30 minutes, periodically changing from forward to reverse. Empty the tank and repeat the process if needed.
- Depending on several variables, it will eventually be necessary to get inside the tank to remove excess sealer that has built up. Removing residual sealer is best done when temperatures are below freezing (or as cold as possible in warmer climates). Be careful when removing sealer with tools, as it is possible to ding the tank.